




WF88 Telnet Setup Guide

Amp'ed RF Technology, Inc.

WF88 Telnet Setup Guide

1. Introduction to WF288 Evaluation Board

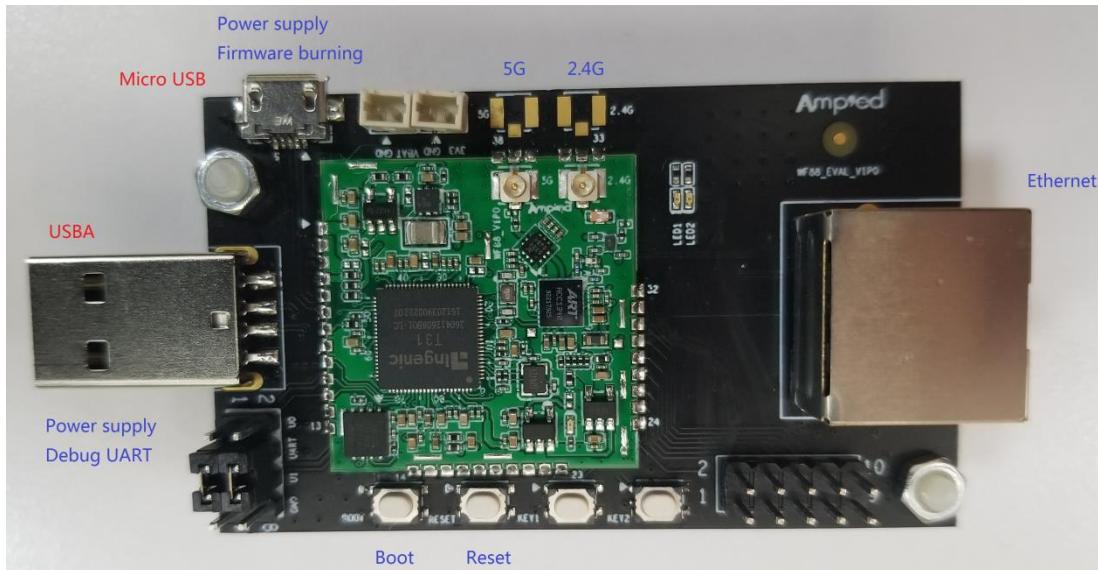

The WF288 is the evaluation board for the WF88 module, and contains the following features:

- Micro USB: firmware update interface and power supply.
- USBA: debugging and serial comm port interface and alternative power supply.
- Boot: boot button for firmware update.
- Reset: system reset button.
- Ethernet interface.

Note: either the Micro USB or USBA can supply power to the board. Both may be used at the same time.

2. Telnet Setup Example

2.1. Telnet login

- Default login username for WF88 is "root"
- Password is "Amped123".

2.2. Configuration file directory

/system/etc/config/sertonet.ini

2.3. Configuration details

;UART0 defaults to 115200bps, with 8 data bits, 1 stop bit, no parity, and no flow control

[uart]

;Set the communication rate of UART0.

;BaudRate = b1200,b2400,b4800,b9600,b19200,b38400,b57600,b115200,b230400,b460800,b921600

```
BaudRate = b115200

;UART0_RTS/UART0_CTS flow control. FlowControl = 1,enable flow control. FlowControl = 0,disable flow
control.

FlowControl = 0

[netsetting]
;Set the protocol used to connect to remote server.
;Protocol = tcp6,TCP connection using IPV6
;Protocol = udp6,UDP connection using IPV6
;Protocol = tcp4,TCP connection using IPV4
;Protocol = udp4,UDP connection using IPV4
Protocol = tcp6

;Set the IP address of the remote server.
;For IPV6, the settings are similar to:ServerIP = fd00:6868:6868::80
;For IPV4, the settings are similar to:ServerIP = 192.168.137.88
ServerIP = fd00:6868:6868::80

;Set the port number for listening to the IP address(ServerIP parameters above) of the remote server.
RemotePortNum = 10000
```

3. Revision History

Date	Revision	Description
15, May, 2023	1.0	Initial version